



This circuit is repeated 8 times

R25, R26, R27, R28, C9, C10 really do connect to chassis ground, not audio ground

## Output Board non-floating configuration.

rev 3 - 2017/08/23